



KCA TOOL BOX TALK: Boom Truck Safety

Heavy items can be lifted safely if the boom truck crane is operated properly. Each time the boom lifts a load, its angle changes as it extends, and the crane's upper deck rotates to swing the load. With that motion, the distance from the load's center of gravity to the crane's tipping axis changes. These movements can make a boom truck unstable, especially if the crane's lift capacity is exceeded. The crane can overturn and the boom can collapse.

Signatures

1. _____
2. _____
3. _____
4. _____
5. _____
6. _____
7. _____
8. _____
9. _____
10. _____
11. _____
12. _____
13. _____
14. _____
15. _____
16. _____
17. _____
18. _____

Before Operating a Boom Truck:

- Check to see that it has been properly inspected and is certified for operation.
- Perform an operational inspection as required for boom truck cranes.
- Be sure support blocking is securely placed.
- Do not operate the crane unless you have been trained and authorized to operate the crane and give signals.
- Do not operate the crane unless you and the signal persons are in direct, clear view or in headset communication.
- Always check the weight of the load and rigging. Do not lift a load that exceeds the crane's capacity.
- Always check the wind speed to make sure it is safe for lifting loads.
- Always use proper blocking methods to adequately support boom sections during disassembly.
- Always warn others of moving and approaching overhead loads.
- If you are working around a boom truck, always obey warning signs, especially those that are posted in critical areas.

For more information visit OSHA REGULATION: 1926.1412 for inspections